

WALL MOUNT LETTER LOCKER INSTALLATION INSTRUCTIONS


* Although basic mounting hardware is included, please be sure to use proper mounting hardware for your wall type. When in doubt, consult your local hardware store.

INSTALLATION: Open the top and bottom door of the mailbox to access screw holes. Place the box where you would like it, and mark the position of the top holes through the box onto the wall. Remove mailbox from wall.

Install the top two screws directly into the wall, leaving screw exposed about 1/8". Place the box onto these two screws like a picture frame, and let the box hang.

Tighten the top screws thru box and install the two bottom screws.

NOTE: If possible, find a stud in the wall and line up the screw holes over the stud. If you can not find a stud, we recommend using a plastic or metal anchor. If you are installing onto a brick wall, we recommend using a "Tapcon" concrete screw.

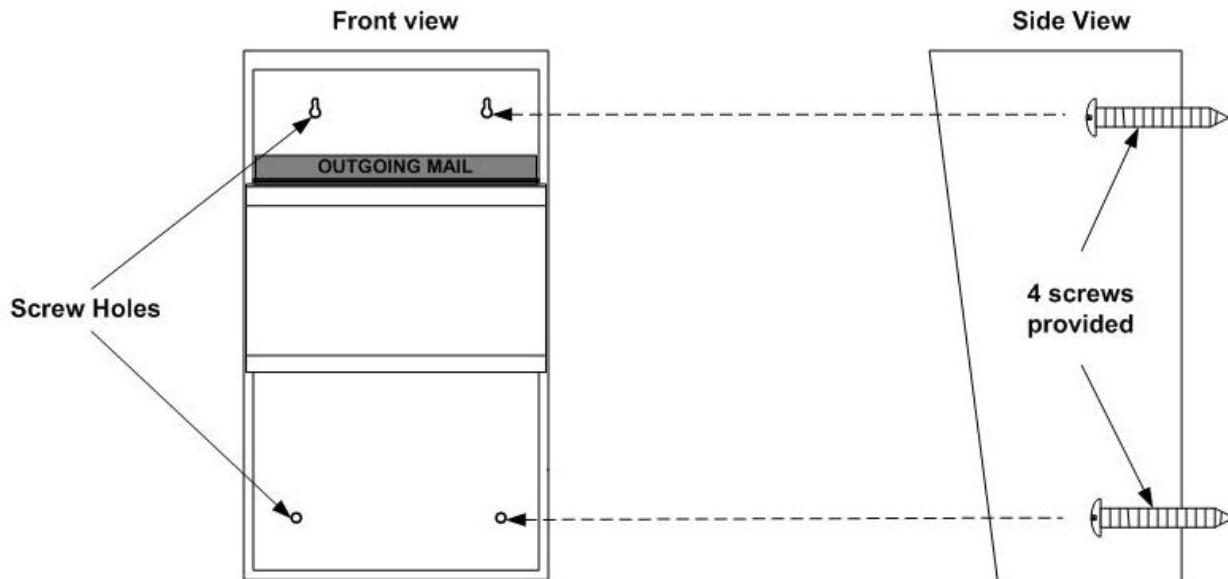

Please check with your local Post Office prior to installation for approval and proper installation height.